

MAINTENANCE

REAR WHEEL REMOVAL

Refer to the Maintenance precautions on page 108.

For rrelated torque specifications, see page 126. The numbers indicate the sequence of disassembly.

