

# MAJOR COMPONENTS

## (Information you need to operate this motorcycle)

---

### REAR SUSPENSION

The rear suspension can be adjusted for rider (and passenger) weight and riding conditions by changing the spring pre-load.

Do not attempt to disassemble, service, or dispose of the damper, see your Honda dealer. The instructions found in this owner's manual are limited to adjustments of the shock assembly only.

### Rear Suspension Spring Pre-load

Rear spring pre-load can be easily increased or decreased using the rear spring pre-load switch on the left front fairing. Then you can confirm the pre-load position with the multi-display.

This electric rear spring pre-load adjustment system functions only when the ignition switch is ON or ACC, your motorcycle is stopped, and the transmission is in neutral. (When the reverse indicator is ON, the system will not function.)

The spring pre-load system has 26 positions (from 0 to 25 ) for different road or riding conditions. (Standard position is 0.)