

FEATURES

(Not required for operation)

KEYLESS ENTRY


You can lock and unlock your motorcycle's travel trunk and saddlebags with the remote transmitter.

If the ignition switch is left off for more than one month, the remote transmitter will no longer operate the remote control system. To reset the system, turn the ignition switch ON.

To lock the compartments:

Push the lock button.


(The front and rear turn signal lights will blink once.)

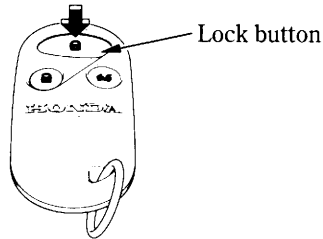

To unlock the compartments:

Push the unlock button.

(The front and rear turn signal lights will blink two times.)

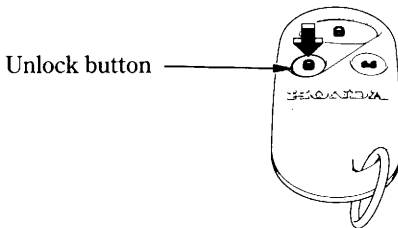

If you unlock the compartments with the transmitter, but do not open any of the compartments within thirty seconds, the compartments automatically relock.

You cannot lock the compartments with the remote transmitter if any compartment is not fully closed. (The front and rear turn signal lights will blink ten times.)