

---

Weather Band (WB):

To listen to the Weather Band – push the WB button.

To cancel the Weather Band – push another band button. (AM, FM 1 or FM 2 button.)

To select channels 1–6 – push the desired preset button.

To select channel 7 – push the TUNE/DISC lever up or down until channel 7 is selected. (The TUNE/DISC lever may be used to select any of the 7 channels. The lever must be used to select channel 7.)

