


Instruments *(Continued)*

Display Setting

You can adjust the three settings.

- Backlight brightness adjustment
- Clock setting
- (III E type only) Changing of speed and mileage unit

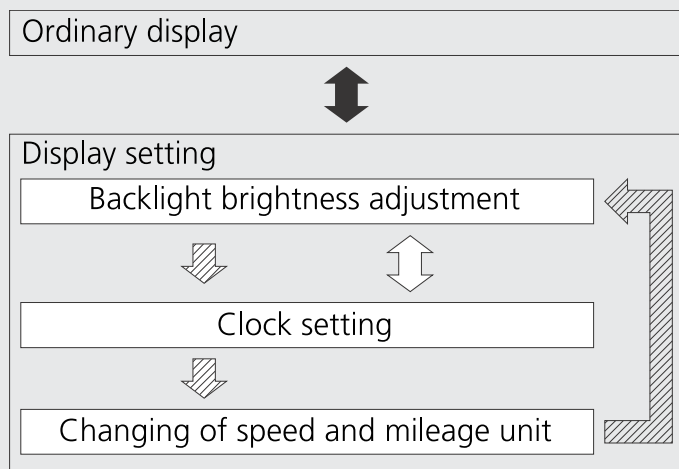

Press and hold A button and B button

Press A button (Except III E type)

Press A button (III E type only)


In addition, to move the ordinary display at display setting.

- The button is not pressed for about 30 seconds
 - Turn the ignition switch off and then on
- Each setting will be cancelled if the A button is not pressed.

1 Backlight brightness adjustment:

You can adjust the brightness three levels.

- 1 Turn the ignition switch to ON.
- 2 Press and hold A button and B button until the minute digit displays the brightness level.
- 3 Press B button. The brightness is switched.

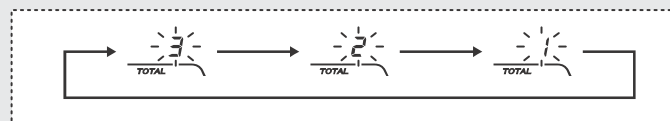

- 4 Press A button. The backlight is set, and then the display moves to the clock setting.