

Low Oil Pressure Indicator..... 28, 95  
Lower Cowl ..... 66  
Luggage Box ..... 44

**M**

**Maintenance**

Fundamentals ..... 53  
Importance ..... 49  
Safety ..... 49  
Schedule ..... 50

Maximum Weight Limit..... 17

Modifications ..... 16

MT Mode ..... 27, 37, 39, 40, 41

**N**

N-D Switch..... 33

Neutral Indicator..... 29

**O**

Odometer ..... 23, 116

**Oil**

Engine ..... 57, 70

Overheating ..... 94

**P**

Parking..... 14

Parking Brake ..... 32

Parking Brake Indicator ..... 29

Parts Location ..... 18

Passing Light Control Switch ..... 30, 32

Petrol..... 43, 118

**PGM-FI (Programmed Fuel Injection)**

malfunction indicator lamp (MIL) .... 28, 95

Protective Apparel ..... 11

**R**

Rear Seat..... 42

**Recommended**

Coolant ..... 59

Fuel ..... 43

Oil ..... 57

Refuelling ..... 42

**Removal**

Clip ..... 68

Lower Cowl..... 66

Maintenance Lid..... 65

Repair Kit..... 99