


2. Put the brakes on a number of times and check that the wheels move freely when the brake lever is released.

NOTE:

- When the adjustment has been done check that the groove on the adjusting nut (2) fits snugly into the arm pin (3).
- If you are not able to carry out the adjustment in this way, contact your Honda dealer.

Other checks:

Check that the brake arm, the spring and the joints are all in good condition.

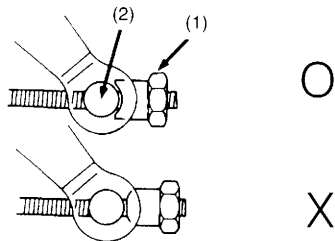

(1) Adjusting nut

(2) Arm pin