

SEAT LOCK

The seat lock (1) is on the left side below the seat.


To lift the seat, insert the ignition key (2) and turn it clockwise to unlock.

Pull the seat up while holding the key on unlock position.

To lock the seat, lower it and press down on it near the hook (3) until it locks.

NOTE:

- Before locking the seat check that you have not left the key in the compartment under the seat.

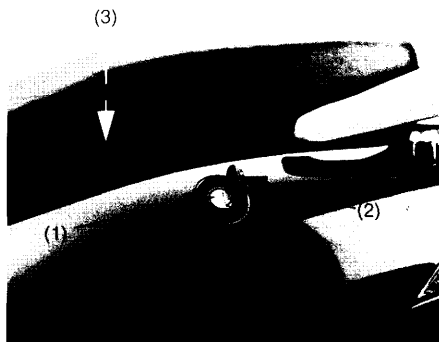

- (1) Seat lock
- (2) Ignition key
- (3) Hooks