


BREATHER SEPARATER

(See "Maintenance precautions" on page 75)
Remove the crankcase breather tube plug (1) from the tube and drain the deposits into a suitable container.

Replace the crankcase breather tube plug.

NOTE:

- Service more frequently when riding in rain at full throttle, or after the motorcycle is washed or overturned. Service if the deposit level can be seen in the transparent section of the drain tube.

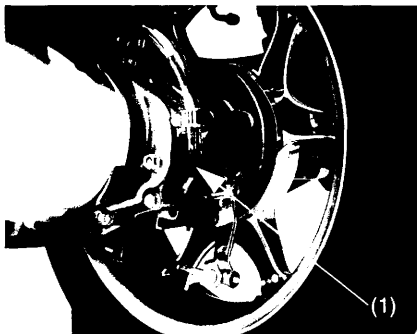

(1) Breather tube plug