

## IDLE SPEED

(See "Maintenance precautions" on page. 75). The engine must be at normal running temperature in order to carry out accurate idle speed adjustment. Ten minutes of stop-go riding is sufficient.


### NOTE:

- Do not attempt to compensate for faults in other systems by adjusting the idle speed. See your Honda dealer for regular carburetor adjustments.
1. Warm up the engine place the scooter on its center stand.
  2. Connect a rev. counter to the engine.
  3. Adjust idle speed (A - B) with the throttle stop screw (1).

**Idle speed:**  
**1.600 rpm**

### **⚠ WARNING**

- The rear wheel will spin if not stopped by the brake or contact with the ground. Accidental contact with a spinning rear wheel could cause personal injury.

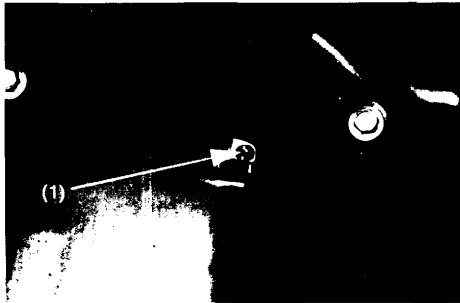

(1) Idle speed adjusting screw