


Position light bulb


1. Pull out the position bulb holder (1) .
2. Pull out the bulb (2) without turning it.
3. Install a new bulb in the reverse order to removal.

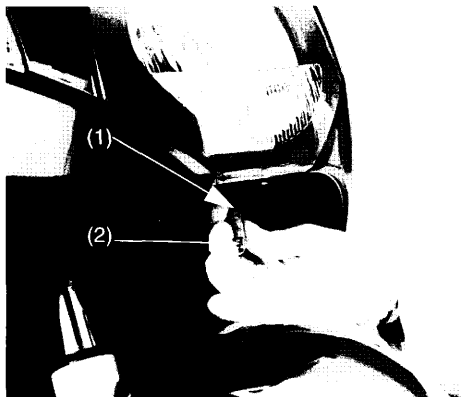

- (1) Position light bulb holder
(2) Bulb

Stop Taillight bulb

1. Remove the two screws (1) securing the rear light and remove the light.
2. Turn the connector by 90° counter clockwise and remove it.
3. Take out the bulb without turning it.
4. Install a new bulb following the removal procedure in reverse.

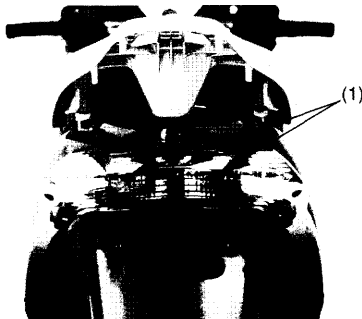

- (1) Screws light