

## STORAGE GUIDE

If the scooter is to stay off the road for a long period, such as for winter, you must take steps to reduce the effects of deterioration from non use of the scooter.

Any necessary repairs should be made **BEFORE** storing, otherwise these repairs may be forgotten by the time the scooter is removed from storage.

### STORAGE

1. Change the engine oil.
2. Make sure that the cooling system is filled with a 50/50 antifreeze solution.
3. Empty the fuel tank into an approved petrol container using a commercially available hand siphon or an equivalent method.

#### NOTE:

- If the storage is going to last for more than a month, it is very important to drain the carburetor, to ensure proper performance after storage.

### **⚠ CAUTION**

- **Petrol is extremely flammable and explosive in certain conditions. Carry out this operation in a well ventilated area with the engine off. Do not smoke or allow flames or sparks in the area where fuel is being drained or refilled, or where fuel is stored.**
4. Remove the spark plug cap from the spark plug and pour a tablespoon (15-20 cm<sup>3</sup>) of clean engine oil for four stroke engines. Crank the engine several times to distribute the oil.

#### NOTE:

- When carrying out this operation, the ignition switch must be OFF.
5. Remove the battery store it in an area protected from freezing temperatures and direct sunlight. Recharge the battery every month.