


Starting

Starting the Engine

Start your engine using the following procedure.

NOTICE

- If the engine does not start within 5 seconds, turn the ignition off and wait 10 seconds before trying to start the engine again to recover battery voltage (Using the start button).
- Extended fast idling and revving the engine can damage the engine, and the exhaust system.

- 1 Place your scooter on its center stand.
- 2 Lock the rear brake.
 - ▶ The starter motor will only work when the brake lever is pulled in.
- 3 Make sure the engine stop switch is in the RUN  position.
- 4 Turn the ignition switch to the ON position.

