


## Inspecting the Brake Lever Freeplay

1. Place your scooter on its center stand on a firm, level surface.
2. Measure the distance of the front and rear brake levers before each brake starts to take hold.

**Freeplay at the tip of the brake levers:** 3/8 to 13/16 in (10 to 20 mm)

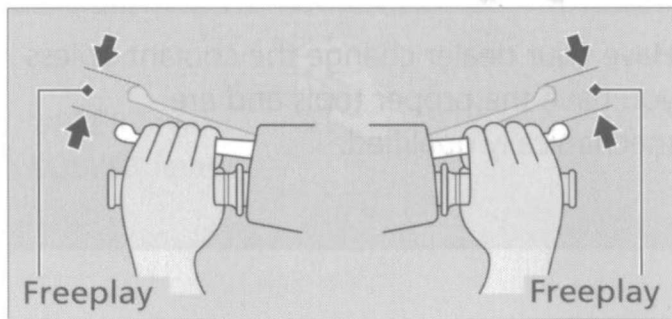

Check the brake cable for kinks or signs of wear. If necessary have it replaced by your dealer.

Lubricate the brake cable with a commercially available cable lubricant to prevent premature wear and corrosion. Make sure the brake arm, spring and fastener are in good condition.