


SEAT LOCK

The seat lock (1), is on the left side below the seat.

To lift the seat , insert the ignition key (2) and turn it clockwise to unlock.

Pull the seat up.

To lock the seat , lower and push down on the opposite side of the hooks (3) of the seat until it locks. Make sure the seat is secure before riding.

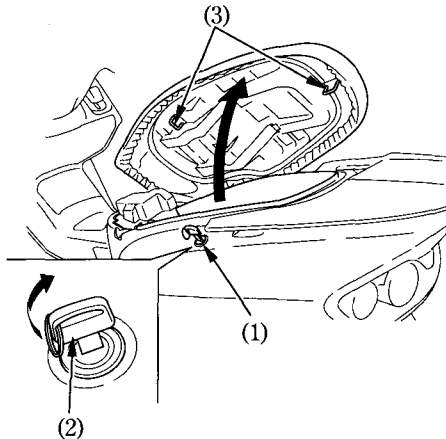

- (1) Seat lock
- (2) Ignition key

- (3) Hooks