


4. Lock the rear wheel by applying the parking brake grip.
5. Squeeze the rear brake lever.

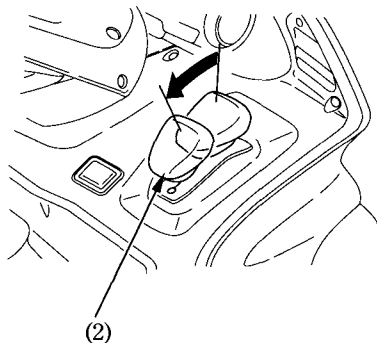


(2) Parking brake grip

**⚠ WARNING**

- \* The rear wheel will spin if not restrained by the brake or by contact with the ground. Accidental contact with a spinning rear wheel could cause personal injury.

**NOTE:**

- \* The electric starter will only work when the rear brake lever is squeezed and the side stand is up.

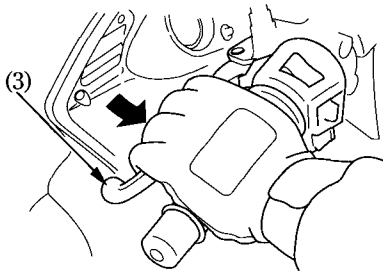

(3) Rear brake lever