


Main fuse:

The main fuse (1) is located in the battery box.

The specified fuse is:

30A

1. Lift the seat (page 39).
2. Remove the battery cover (page 95).
3. Disconnect the wire connector (2) of the starter magnetic switch.
4. Pull out the old fuse and install a new fuse.
The spare main fuse (3) is located in the battery box.
5. Reconnect the connector and install the battery cover.

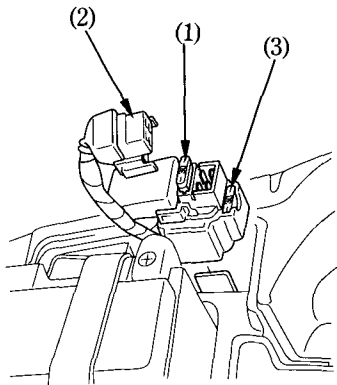

(1) Main fuse

(3) Spare main fuse

(2) Wire connector