


## TRANSPORTING

### **▲WARNING**

- \* To prevent the possibility of a fire or explosion when transporting the scooter, always:
  - Drain the fuel tank and carburetor.
  - Carry the scooter upright in its normal riding position to prevent oil and battery electrolyte from leaking.

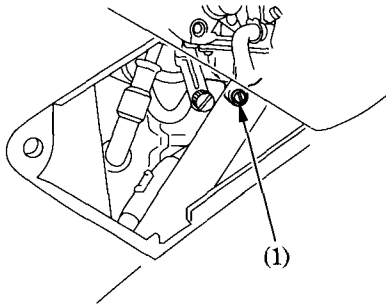

(1) Drain screw

### **Draining Fuel**

Perform this operation only in a well-ventilated area.

### **▲WARNING**

- \* Petrol is extremely flammable and is explosive under certain conditions. Perform this operation in a well-ventilated area with the engine stopped. Do not smoke or allow flames or sparks in the area where petrol is drained or stored and where the fuel tank is refueled.

1. Stop the engine.
2. Empty the fuel tank using a commercially available hand siphon or other equivalent way.
3. Place the free end of the carburetor draitube in a suitable container.
4. Open the carburetor drain by turning the drain screw (1) counter clockwise. When all the fuel has drained, turn the screw clockwise until tight.