


FEATURES

(Not required for operation)

STEERING LOCK

To lock the steering, turn the handlebar all the way to the left, turn the key (1) to LOCK while pushing in. Remove the key.

Do not turn the key to LOCK while riding the scooter; loss of vehicle control will result.

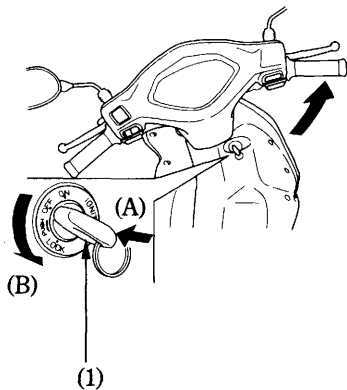

(1) Ignition key

(A) Push in

(B) Turn to LOCK