


SEAT LOCK

The seat lock (1) is on the backside of the seat.

To lift the seat, insert the ignition key (2) and turn it clockwise to unlock.

To lock the seat, lower and push down on it until it locks. Make sure the seat is secure before riding.

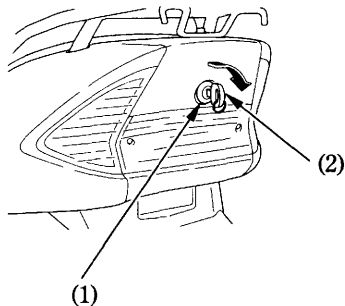

- (1) Seat lock
- (2) Ignition key