

BODY COVER

Raise:

1. Open the seat (page 33).
2. Remove the bolts A (1).
3. Remove the bolts B (2), the passenger foot pegs (3), and the collars (4).
4. Lift up the body cover (5) and stand the rod (6).



Installation:

- Installation can be done in the reverse order of removal.

Do not move the scooter by holding it by the rear grip with the body cover lifted up.

Do not sit on the seat with the body cover lifted up.

Place the scooter on its center stand when servicing the scooter with the body cover lifted up.

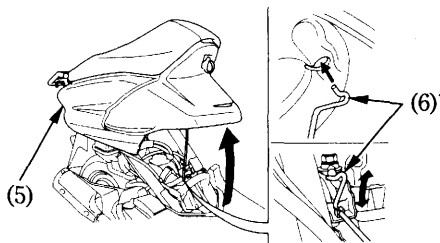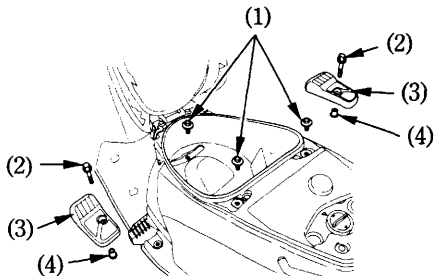

- | | |
|-------------------------|----------------|
| (1) Bolts A | (4) Collars |
| (2) Bolts B | (5) Body cover |
| (3) Passenger foot pegs | (6) Rod |