


Adjustment:

Drive chain slack should be checked and adjusted, if necessary, every 1,000 km (600 miles). When operated at sustained high speeds or under conditions of frequent rapid acceleration, the chain may require more frequent adjustment.

If the drive chain requires adjustment, the procedure is as follows:

1. Loosen the axle nut (1).
2. Turn both the right and left adjusters(2) equally to increase or decrease chain slack.
3. After adjusting, be sure the same adjuster index marks (3) align with the stopper pins (4) on both sides of the swingarm.

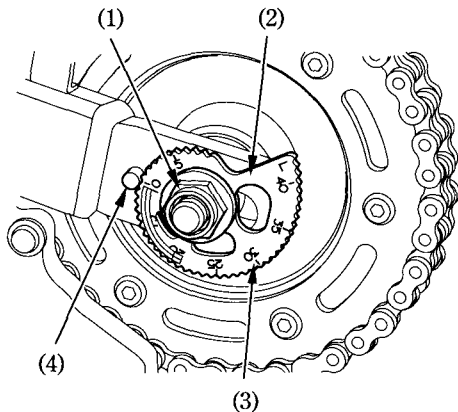

- (1) Axle nut
(2) Chain adjuster

- (3) Index mark
(4) Stopper pin