

Installation Notes:

- To install the rear wheel, reverse the removal procedure.
- Make sure the tang (4) on the swingarm is located in the slot (5) in the brake panel (6).
- Tighten the axle nut to the specified torque.


Axle nut torque:

93 N·m (9.5 kgf·m , 69 lbf·ft)

- Adjust the drive chain (page 65).
- After installing the wheel, apply the brake several times and then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

▲ WARNING

- **If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.**

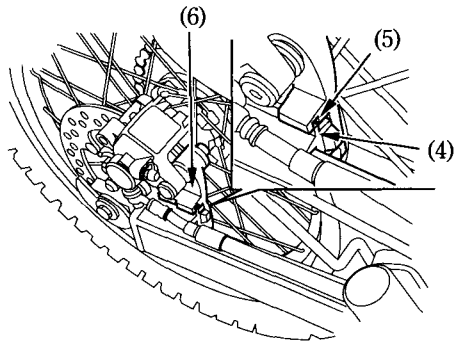

(4) Tang
(5) Slot

(6) Brake panel