


(For Some Types)

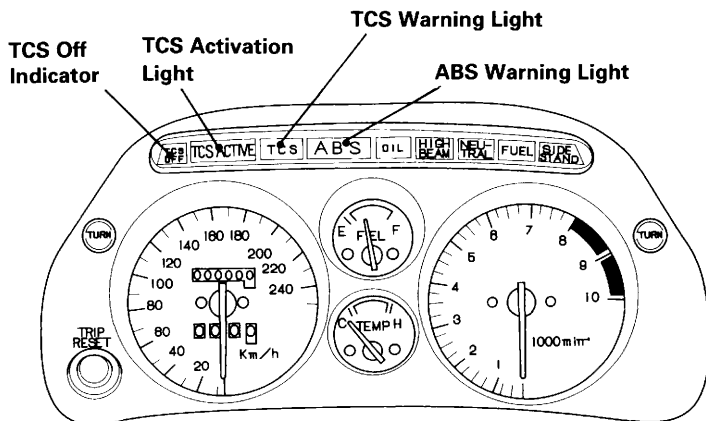

Anti-lock Brake System (ABS) Warning Light

This light normally comes on when the ignition is turned ON and goes off after starting to ride.

If there is a problem with the Anti-lock Brake System, this light comes on and remains on — or blinks. (See chart on page 14.) For information about ABS, see page 50.

Traction Control System (TCS) Warning Light

This light normally comes on when the ignition is turned ON and goes off after starting to ride.

If there is a problem with the Traction Control System, this light comes on and remains on — or blinks. (See chart on page 14.) For more information about TCS, see page 54.

TCS Activation Light

This light lights when the traction control system is activated to regulate the engine (see page 54). It will normally light for a few seconds when you turn the main switch ON.

TCS Off Indicator

This indicator lights when the traction control system is OFF (see pages 55 and 56). It will normally light for a few seconds when you turn the ignition ON.