

MAJOR COMPONENTS

(Information you need to operate this motorcycle)

Tire Repair/Replacement

See your authorized Honda Dealer.

▲ WARNING

- *The use of tires other than those listed on the tire information label may adversely affect handling.*
- *Do not install tube-type tires on tubeless rims. The beads may not seat and the tires could slip on the rims, causing tire deflation that may result in a loss of vehicle control.*
- *Any attempt to mount passenger car tires on a motorcycle rim may cause the tire bead to separate from the rim with enough explosive force to cause serious injury or death.*
- *Do not install a tube inside a tubeless tire. Excessive heat build-up may cause the tube to burst resulting in rapid tire deflation that may result in a loss of vehicle control.*
- *Proper wheel balance is necessary for safe, stable handling of the motorcycle. Do not remove or change any wheel balance weights. When wheel balancing is required, see your authorized Honda dealer. Wheel balancing is required after tire repair or replacement.*
- *To avoid possible repair failure and tire deflation that may result in a loss of vehicle control, do not exceed 80 km (50 mph) for the first 24 hours, or 130 km (80 mph) at any time, after tire repair.*
- *Replace the tire if the sidewall is punctured or damaged. Sidewall flexing may cause repair failure and tire deflation that may result in a loss of vehicle control.*

CAUTION:

- *Do not try to remove tubeless tires without special tools and rim protectors. You may damage the rim sealing surface or disfigure the rim.*
- *When replacing tires, use the same tires those listed on the tire information label. Use of other tires may impair in the proper ABS and TCS function (Equipped with the ABS and TCS).*