


---

- Shelter

1. Remove the seat (see page 36).
2. Remove the shelter by removing bolts.

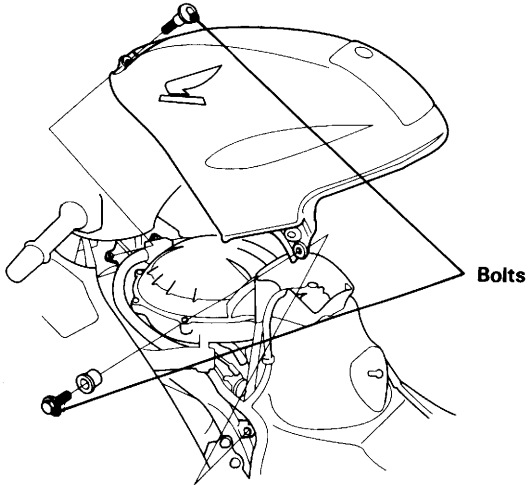

- Front Lower Cover

Remove the bolts then slide the cover forward.

**NOTE:**

- Use the short collar bolt in the right rear hole when installing the under cowl.

