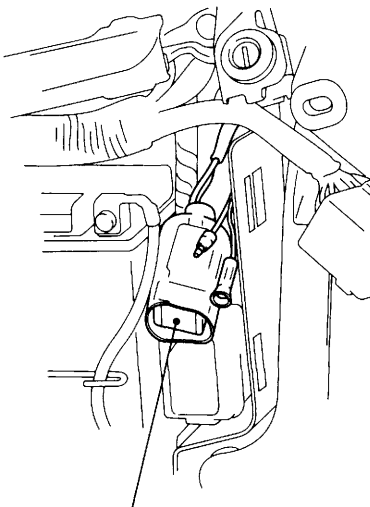

Accessory fuse:

The accessory fuse, located behind the fuse box, is:

5A

1. Turn the ignition switch OFF before checking or replacing a fuse to prevent an accidental short circuit.
2. Remove the left side cover (page 71).
3. Remove the fuse box.
4. Remove the accessory fuse box cover.
5. Pull out the fuse. If the accessory fuse is blown, install a new fuse. The spare fuse is located in the accessory fuse box.
6. Install the fuse box cover, fuse box and left side cover.



Accessory Fuse Box

