
SEAT

To remove the rear seat

Insert the ignition key and turn it clockwise to open the latch lever. Pull the rear seat back and up while depressing a seat opener.

To remove the front seat

Remove the front seat. Pull the front seat back and up.

To install the front seat

Insert the prong into the recess under the frame cross member and then push down on the rear of the front seat.

Be sure to align the hole in the rear of the front seat with the adjuster when install the front seat.

To install the rear seat

Install the front seat. Insert the prong into the recess under the frame cross member and then push down on the rear of the rear seat. Close the latch lever and turn the ignition key counterclockwise.

Be sure the seat is locked securely in position after installation.

