

MAINTENANCE

IDLE SPEED


Refer to the Safety Precautions on page 82 .

The engine must be at normal operating temperature for accurate idle speed adjustment. Ten minutes of stop-and-go riding is sufficient.

1. Warm up the engine, and shift to neutral, and place the motorcycle on its center stand.
2. Adjust idle speed with the throttle stop screw.

Idle speed (In neutral):

$1,000 \pm 100 \text{ min}^{-1} (\text{rpm})$

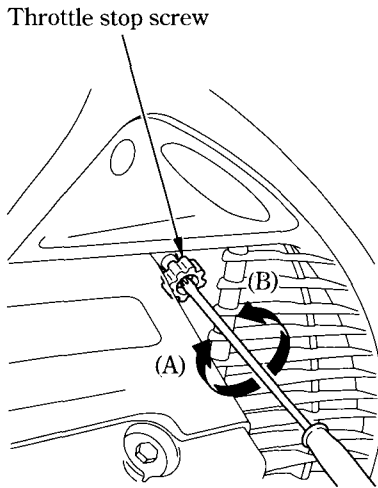

(A) Increase

(B) Decrease