

To check and adjust brake lever free play:

Measure the distance the rear brake lever moves before the brake starts to take hold. Free play, measured at the tip of the brake lever (Fig. 4-29), should be within  $5/8$ — $3/4$  in (15—20 mm).

To adjust the free play, turn the brake lever adjusting nut (Fig. 4-28), located on the brake operating rod at the rear of the frame. Make sure the cut-out on the adjusting nut is properly seated on the brake arm pin (3).

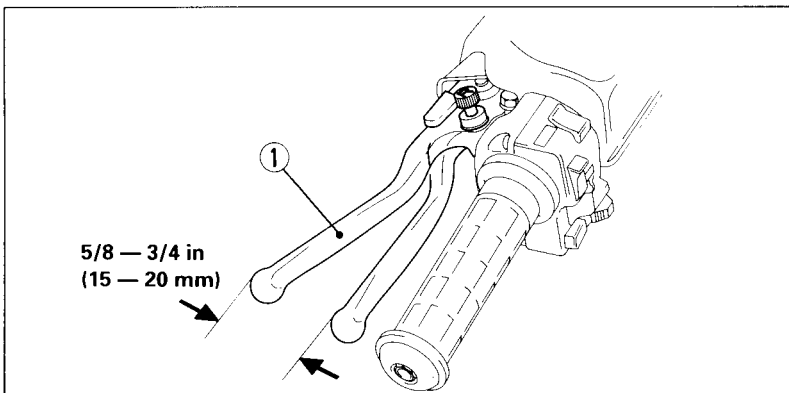


Fig. 4-29

(1) Brake lever