

D	
Differential oil	100
Dimmer switch	19
Dipstick	28, 94
Driveshaft boots	132
E	
Engine	
Engine guard and skid plates	129
Idle speed adjustment	91
Break-in procedures	II
Flooded engine	56
Starting the engine	55
Engine oil	
Changing oil	96
Checking oil level and adding oil	94
Oil filler cap/dipstick	28
Oil filter	96
Oil high temperature indicator lamp	19
Recommendations	95
Engine stop switch	14
Exhaust system	
Cleaning	35
Purging	130
F	
Final gear case oil	99
Flag pole bracket	30
Flooded engine	56
Fuel	
Fuel gauge	25
Fuel fill cap	26, 82
Fuel recommendations	84
Fuel tank capacity	82
Fuel valve	27
High altitude fuel mixture adjustment	93
Refueling	82
Reserve fuel supply	27