


Starting & Stopping the Engine

Always follow the proper starting procedure described below.

For your safety, avoid starting or operating the engine in an enclosed area such as a garage. Your ATV's exhaust contains poisonous carbon monoxide gas which can collect rapidly in an enclosed area and cause illness or death.

Preparation

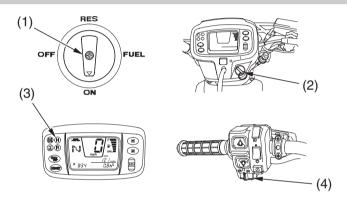

- (1) fuel valve
- (2) ignition switch
- (3) neutral indicator
- (4) engine stop switch
- 1. Before starting, select a level surface and lock the parking brake (page 38).
- 2. Turn the fuel valve (1) and ignition switch (2) to ON (|).

Confirm the following:

- The transmission is in neutral, and the neutral indicator (3) is ON.
- The engine stop switch (4) is set to RUN (\bigcirc) .

68 Basic Operation & Riding

