


## **Brakes**

## **Draining Water from Brakes**

Refer to Safety Precautions on page 99.

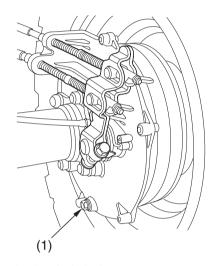

- (1) rear brake drain bolt
- 1. Make sure the engine is OFF and the parking brake is set.
- 2. Remove the rear brake drain bolt (1) from the bottom of the rear brake panel.

If any water drains, the brake seals must be replaced by your Honda dealer as soon as possible.

## 156 Servicing Your Honda

