

11. Fill the crankcase with the recommended oil (► P. 57) and install the oil fill cap.

Required oil
VFR1200X

When changing oil & engine oil filter:

3.3 litres (3.5 US qt, 2.9 Imp qt)

When changing oil only:

3.1 litres (3.3 US qt, 2.7 Imp qt)

VFR1200XD

When changing oil & engine oil filter:

3.9 litres (4.1 US qt, 3.4 Imp qt)

When changing oil only:

3.6 litres (3.8 US qt, 3.2 Imp qt)

12. Check the oil level. ► P. 68
13. Check that there are no oil leaks.
14. Install the right engine heat guard and right under cowl.