



Adjusting the Windscreen Height

You can adjust the windscreen height 2 positions.

1. Remove the windscreen by removing the screws and the washers.

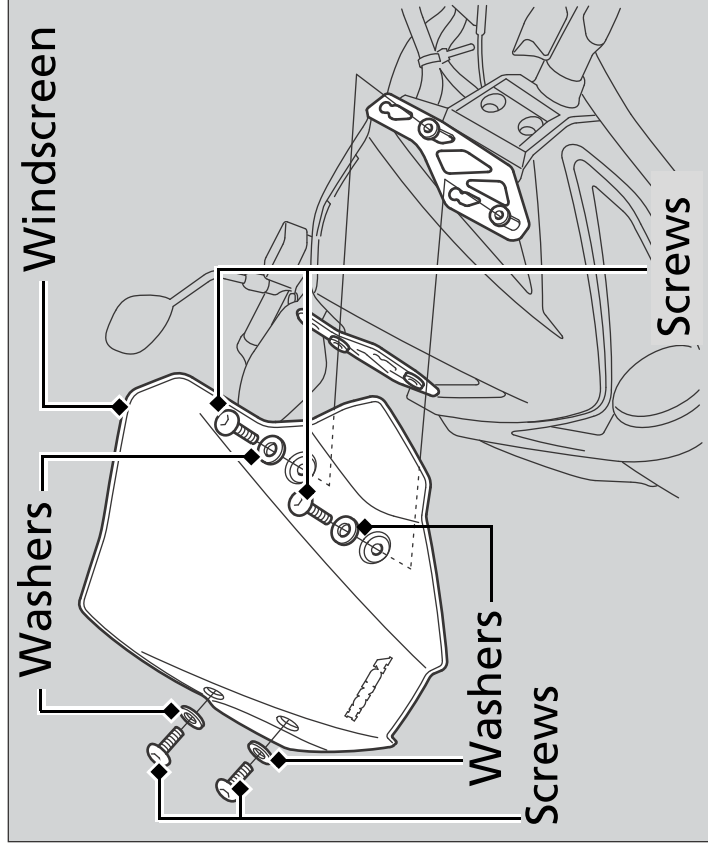

2. Remove the nuts.

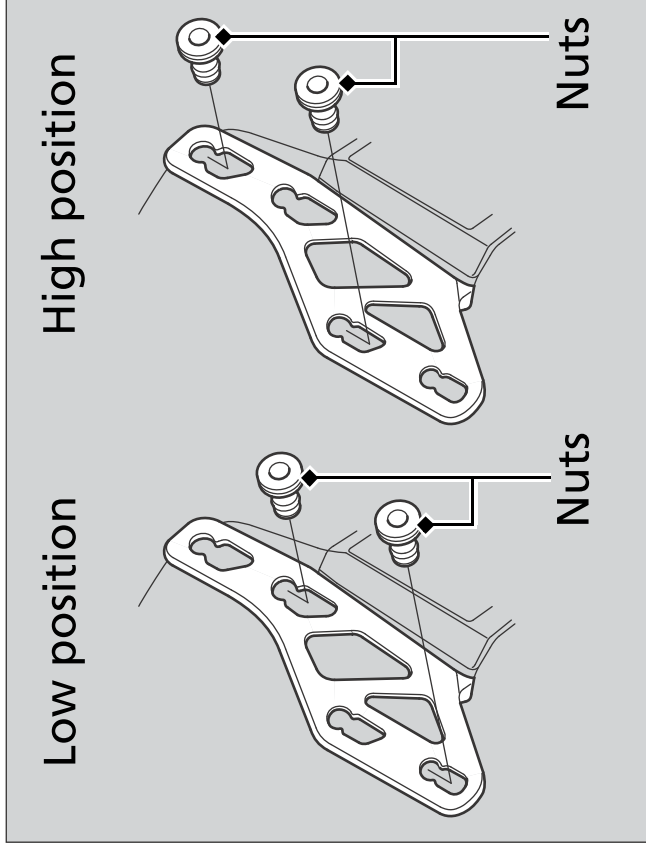

3. Set the all nuts to the low position holes or high position holes.
4. Install the windscreen.
5. Install and tighten the screws and washers.