

Air Temperature Meter


Air temperature meter (1) shows air temperature digitally.

If the display is coolant temperature, push the SELECT button (2).

Temperature Display

Below -11°C	"--" is displayed.
Between -10°C and 50°C	Actual air temperature is indicated.
Above 50°C	The display will remain " 50°C ".

The temperature sensor is located in the upper cowl. Therefore, the temperature reading can be affected by heat reflection from the road surface, engine heat, and the exhaust from the surrounding traffic. This can cause the temperature reading not to be correct when your speed is under 30 km/h (19 mph).

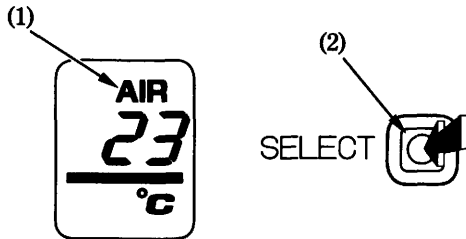

- (1) Air temperature meter
- (2) SELECT button