


## Digital Clock


Shows hour and minute. To adjust the time, proceed as follows:

1. Turn the ignition switch ON.
2. Push and hold both the SELECT button (2) and RESET button (3) for more than 2 seconds. The clock will be set in the adjust mode with the display flashing.

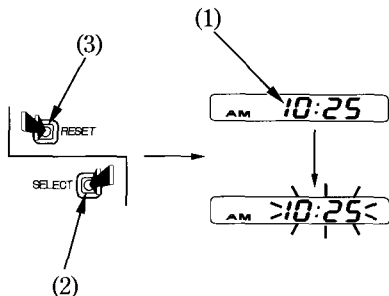

- (1) Digital clock
- (2) SELECT button
- (3) RESET button

3. To set the hour, press the RESET button until the desired time and AM/PM are displayed.
  - The time is advanced by one minute, each time the button is pushed.
  - The time is advanced by ten minutes, when the button is pushed and held.

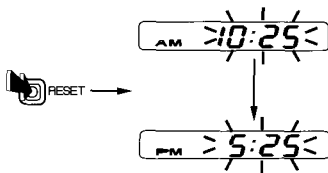

4. To end the adjustment, press the RESET button 5 seconds after the last adjustment, or turn the ignition switch OFF.