

Main Fuse A:

The main fuse A (1) is located on the starter magnetic switch under the seat.

The specified fuse is:

30A

1. Remove the seat (page 58).
2. Disconnect the wire connector (2) of the starter magnetic switch.
3. Pull out the old fuse and install a new fuse.
The spare fuse (3) is located side of the starter magnetic switch.
4. Reconnect the connector and install the seat.


Main Fuse B:

The main fuse B (4) is located under the seat.

The specified fuse is:

30A

1. Remove the seat (page 58).
2. Open the main fuse B cover (5).
3. Pull out the old fuse and install a new fuse.
The spare fuse (3) is located side of the starter magnetic switch.
4. Close the main fuse B cover and install the seat.

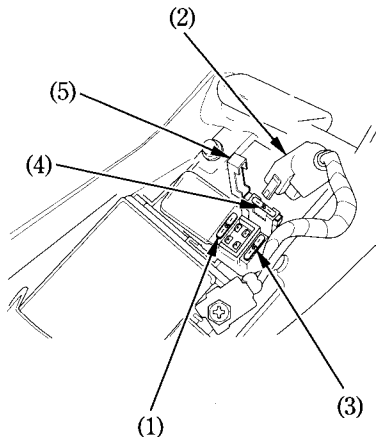

- | | |
|---------------------|-----------------------|
| (1) Main fuse A | (4) Main fuse B |
| (2) Wire connector | (5) Main fuse B cover |
| (3) Spare main fuse | |