


## Removing & Installing Body Components

### Seat

Maintenance

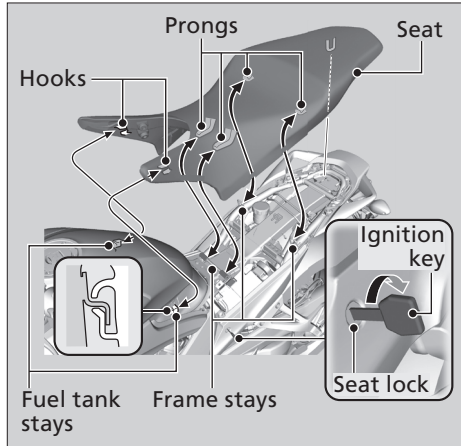

### Removal

1. Insert the ignition key into the seat lock, and turn and hold the key clockwise to unlock the seat.
2. Pull the rear of the seat back and up.

### Installation

1. Install the seat while aligning its hooks with the fuel tank stays and its prongs with the frame stays.
2. Push forward and down on the rear of the seat until it locks in place.  
Make sure that the seat is locked securely in position to pull it up lightly.

The seat locks automatically when closed. Take care not to lock your key in the underseat compartment.