



Troubleshooting

Engine Will Not Start
(HISS indicator stays ON)..... P.80

Overheating
**(High coolant temperature/
warning indicators are ON)**P.81

Warning Indicators ON or Flashing..... P.82

 Low Oil Pressure Indicator P.82

 PGM-FI (Programmed Fuel Injection)
 Malfunction Indicator Lamp (MIL)..... P.82

 ABS Indicator (Anti-lock Brake System) P.83

Other Warning Indication..... P.84

 Fuel Gauge Failure Indication P.84

Tyre Puncture..... P.85

Electrical Trouble.....P.92

 Battery Goes Dead.....P.92

 Burned-out Light BulbP.92

 Blown Fuse P.96