



Warning Indicators ON or Flashing

Low Oil Pressure Indicator

If the low oil pressure indicator and the warning indicator come ON, pull safely to the side of the road and stop the engine.

NOTICE

Continuing to ride with low oil pressure can cause serious damage to the engine.

1. Check the engine oil level, and add oil as necessary. ➤P.61
2. Start the engine.
 - ▶ Only continue riding if the low oil pressure indicator and the warning indicator go OFF.

Rapid acceleration may momentarily cause the low oil pressure indicator and the warning indicator to come ON, especially if the oil is at or near the low level.

If the low oil pressure indicator and the warning indicator stay ON when the oil level is at the proper level, stop the engine and contact your dealer.

If the engine oil level goes down rapidly, your motorcycle may have a leak or another serious problem. Have your motorcycle inspected by your dealer.

PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL)

If the indicator comes ON while riding, you may have a serious problem with the PGM-FI system. Reduce speed and have your motorcycle inspected by your dealer as soon as possible.