



Tyre Puncture ► Removing Wheels

Installation

1. To install the rear wheel, reverse the removal procedure.
2. Tighten the rear wheel nuts equally.

Torque: 108 N·m (11.0 kgf·m, 80 lbf·ft).

3. Tighten the muffler band bolts.

Torque: 21 N·m (2.1 kgf·m, 15 lbf·ft).

4. Check that the wheel rotates freely.

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

Troubleshooting