


Honda selectable torque control (Torque Control) (Continued)

Operation Guide

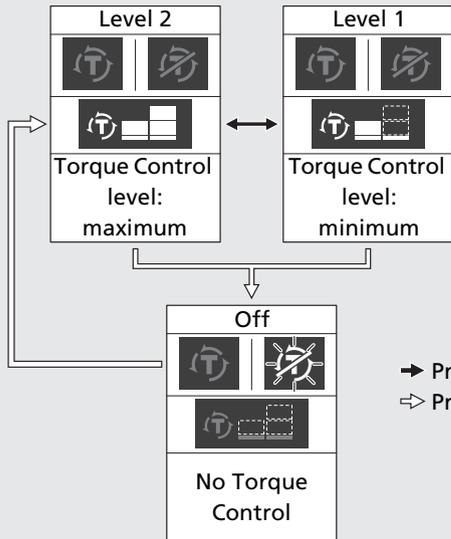

- ➔ Press the Torque Control switch
- ⇨ Press and hold the Torque Control switch