

Maintenance

Please read "Importance of Maintenance" and "Maintenance Fundamentals" carefully before attempting any maintenance. Refer to "Specifications" for service data.

| | |
|--|-------|
| Importance of Maintenance | P. 52 |
| Maintenance Schedule | P. 53 |
| Maintenance Fundamentals | P. 56 |
| Tool kit | P. 67 |
| Removing & Installing Body Components | P. 68 |
| Rear Seat | P. 68 |
| Front Seat | P. 69 |
| Right Under Cover | P. 71 |
| Battery Cover | P. 72 |
| Battery | P. 74 |
| Engine Oil | P. 75 |
| Coolant | P. 79 |
| Brakes/Clutch | P. 81 |
| Side Stand | P. 84 |
| Drive Chain | P. 85 |
| Throttle | P. 88 |
| Other Adjustments | P. 89 |
| Clutch and Brake Levers | P. 89 |
| Front Suspension | P. 90 |
| Rear Suspension | P. 92 |
| Headlight Aim | P. 93 |
| Front Seat Height | P. 94 |