

Removing & Installing Body Components ▶ Battery Cover

Battery Cover

The battery cover must be removed to remove the battery, to service the main and fuse box fuses.

Removal

When setting the high seat position:

1. Remove the front seat. ▶ P. 69
2. Remove the clips.
3. Remove the battery cover.

