


Headlight/Position Light Bulb


1. Remove the two bolts (1) from the headlight case.
2. Gently pull the lower end of the headlight (2) forward the headlight.
3. Disconnect the connectors (3).
4. —Headlight bulb:
 - Remove the seat rubber (4).
 - Remove the headlight bulb (5) while pressing down on the pin (6).

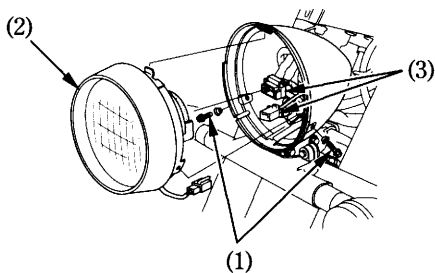

- (1) Bolts
(2) Headlight

(3) Connectors

5. Install a new bulb in the reverse order of removal.
 - Install the dust cover with its “TOP” mark (9) facing up.

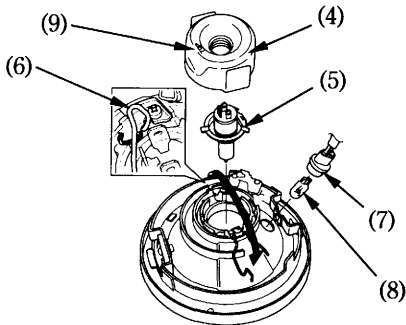

- (4) Seat rubber
(5) Headlight bulb
(6) Pin

- (7) Socket
(8) Position light bulb
(9) “TOP” mark