	FREQUENCY	WHICHEVER → COMES		ODOMETER READING [NOTE (1)]							
		FIRST	× 1,000 km	1	6	12	18	24	30	36	Refer
		↓	× 1,000 mi	0.6	4	8	12	16	20	24	to
IT	ITEM		MONTH		6	12	18	24	30	36	page
*	FUEL LINE					I		I		I	_
*	THROTTLE OPERATION					I		I		I	87
	AIR CLEANER	NOTE (2)	F				R			R	89
	CRANKCASE BREATHER	NOTE (3)			C	C	C	C	C	C	84
	SPARK PLUGS				I	R	I	R	I	R	85
*	VALVE CLEARANCE			I		I		I		I	— —
	ENGINE OIL			R		R		R		R	79
	ENGINE OIL FILTER			R		R		R		R	81
*	ENGINE IDLE SPEED			I	I	I	I	I	I	I	_
	RADIATOR COOLANT	NOTE (4)				I		I		R	34, 88
*	COOLING SYSTEM					I		I		I	_
*	SECONDARY AIR SUPPLY SYSTEM					I		I		I	_