

## TOOL KIT


The tool kit (1) is stored in the tool box (2) behind the left side cover.

Remove the left side cover (page 56).

Remove the tool box cap (3).

Some roadside repairs, minor adjustments and parts replacement can be performed with the tools contained in the kit.

- Fuse puller
- 4 mm Hex wrench
- 5 mm Hex wrench
- 6 mm Hex wrench
- 8 mm Open end wrench
- 10 × 14 mm Open end wrench
- 14 × 17 mm Open end wrench
- No. 2 Phillips screwdriver
- No. 2 screwdriver
- Screwdriver handle
- 22 mm Box end wrench
- 27 mm Box end wrench
- Extension bar
- Pin spanner
- Spark plug wrench
- Tool bag

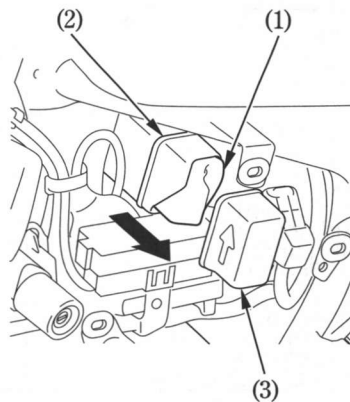

- (1) Tool kit
- (2) Tool box
- (3) Tool box cap