

Main Fuse, FI Fuse:


The main fuse (1) and FI fuse (2) are located behind the left side cover.

The specified fuses are:

Main fuse 30A

FI fuse 20A

1. Remove the left side cover (page 56).
2. Release the tabs (3), then remove the starter magnetic switch cover (4).
3. Pull out the fuse with the fuse puller furnished in the tool kit (page 76). If the fuse is blown, install a new fuse. The spare fuses are located in the fuse box (page 111).
4. Install the starter magnetic switch cover and left side cover.

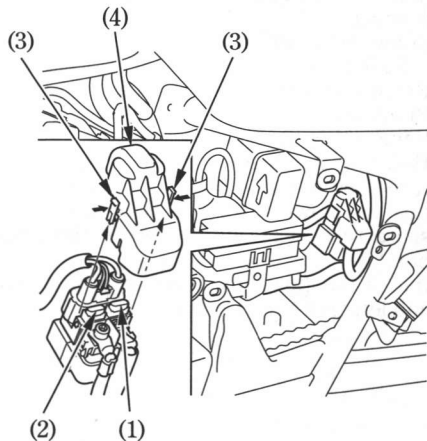

- (1) Main fuse
- (2) FI fuse
- (3) Tabs
- (4) Starter magnetic switch cover