

<b>(Ref. No.) Description</b>	<b>Function</b>
(7) Neutral indicator (green)	Lights when the transmission is in neutral.
(8) High beam indicator (blue)	Lights when the headlight is on high beam.
(9) Right turn signal indicator (green)	Flashes when the right turn signal operates.
(10) Coolant temperature gauge	Shows coolant temperature (page 13).
(11) Tripmeter reset button and Odometer/Tripmeter select button	This button is used to reset the tripmeter or to select the tripmeter or odometer (page14).
(12) Odometer/Tripmeter display	Shows accumulated milege. Shows milege per trip.
(13) Left turn signal indicator (green)	Flashes when the left turn signal operates.